


ANDRITZ Medium-Consistency Pump

MC Series



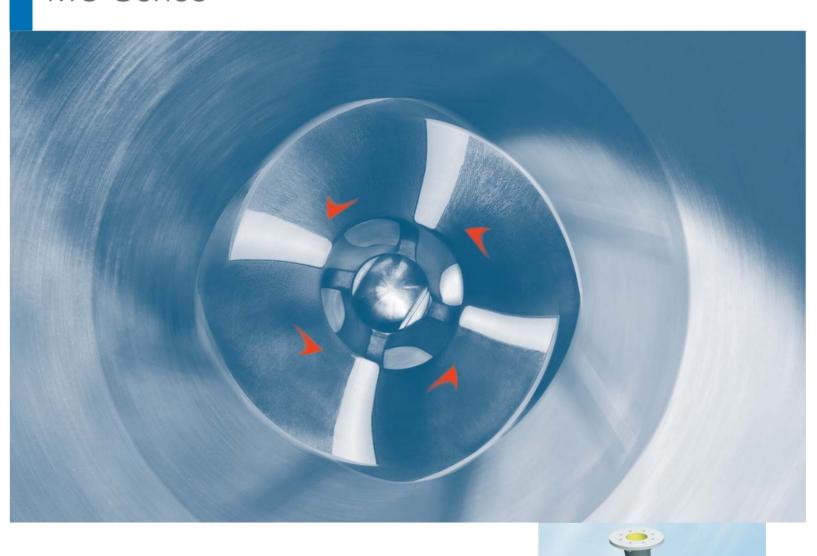

Highest efficiencies without vacuum pump

For over 100 years ANDRITZ has been a byword for competence and innovation in designing and building centrifugal pumps.

As suppliers of complete production systems for the pulp and paper industry, we have acquired broad expertise of the related process technologies – the basis for our successful development of components for conveying paper stock and pulp.

The newly developed ANDRITZ Medium-Consistency Pump, MC Series, sets new standards in conveying medium-consistency stock suspensions. It fulfils highest customer expectations regarding efficiency, life cycle, maintenance friendliness and economic efficiency.

All pump parts are manufactured according to the highest quality standards in our ISO certified workshops. The superior quality of our products derives from compliance with these stringent requirements.

Fields of application:

Conveyance of stock suspensions of up to 16% bone dry in the pulp and paper industry, e.g.

- Chemical pulp
- Mechanical pulp
- Waste paper
- Molasses


The facts:

- Degassing without internal or external vacuum pump
- Flow rates up to 5,000 admt/d
- Heads up to 195 m
- Stock temperatures up to 140 °C (pressureless infeed)
- Stock consistencies up to 16% bone dry
- Pressure up to 25 bar
- depending on pump size
- Efficiencies up to 70%




Technology to convince you

The high standard of ANDRITZ Medium Consistency Pumps, MC Series, is based on decades of experience in designing hydraulic machines and on extensive process know-how.

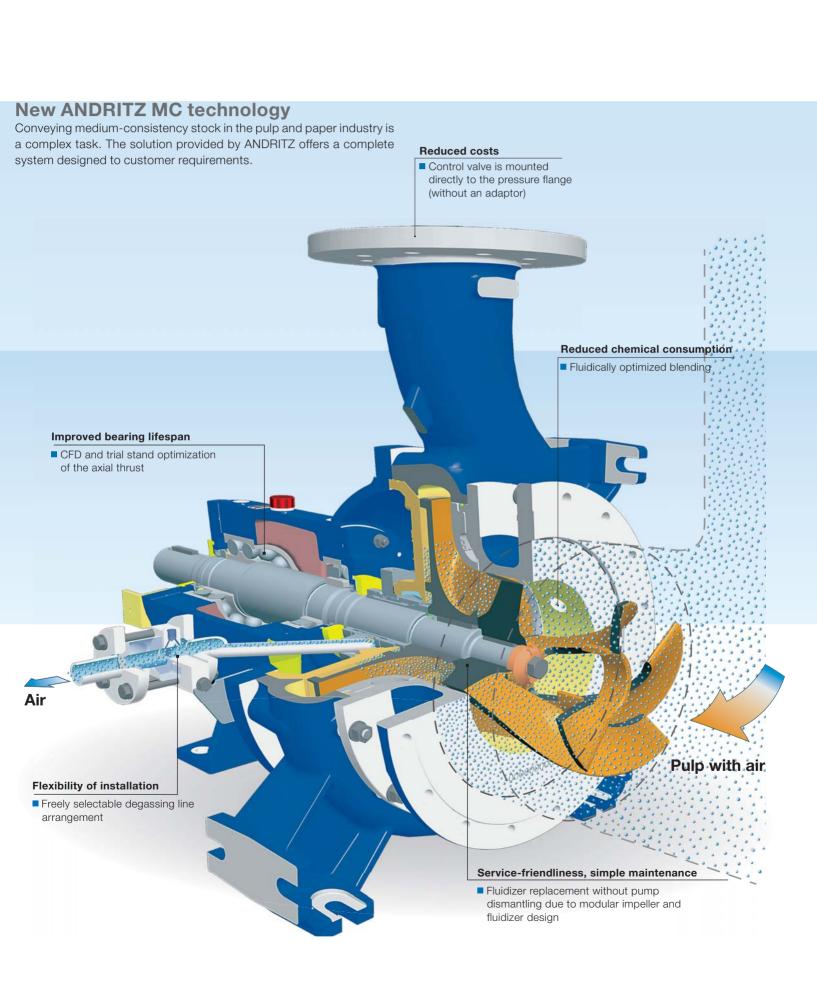



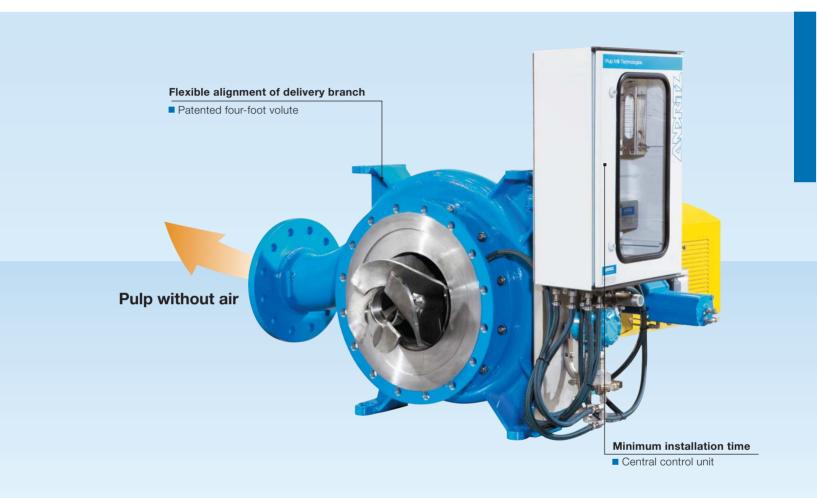

Patented degassing system

ANDRITZ offers the first practically tested single-shaft solution for pumping MC stock. Due to the patented new degassing system no vacuum pump is needed for any operating range. Use of new methods for stock degassing and fluidization makes the advanced ANDRITZ MC technology especially attractive.

Advantages:

- Good homogenization of the stock
- No fibre loss during degassing process
- Simple handling (no need for vacuum level control)




Innovative stock degassing system


High research and development capabilities

Extensive test series carried out at the in-house test rigs have made a key contribution towards optimizing the degassing process. The newly developed ANDRITZ MC Pump operates without an internal or external vacuum pump.

Efficiencies of up to 70% and a minimum of components increase the effectiveness of our pump technology. Further strengths of our new design are a high degree of energy saving and short service times due to the modular structure of the ANDRITZ MC Pump.

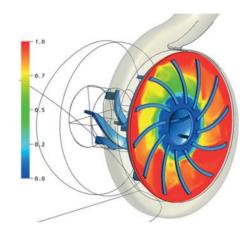

Characteristic curves

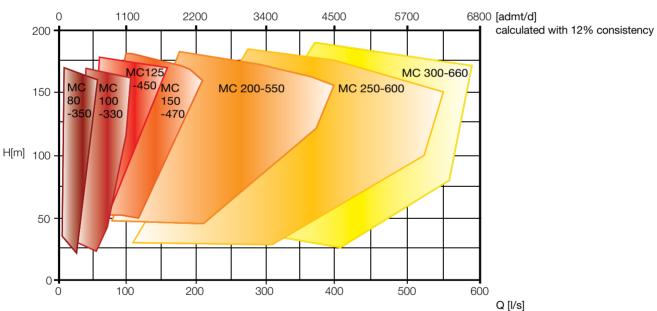

Material combinations

| MC Series | EN-GJL 250 | 1.4460 | 1.4462 | 1.4517 | 1.4517 h | 1.4469 | 1.4468 |
|---------------------|------------|--------|--------|--------|----------|--------|--------|
| Impeller | | | | | - | | |
| Casing/casing cover | | | | | | | |
| Bearing housing | | | | | | | |
| Front lining | | | | | | | |
| Key on motor side | | | | | | | |
| Fluidisator | | | | | | | |
| Suction flange | | | | | | | |
| Shaft | | | | | | | |

| European standard | | US standard | | |
|-------------------|----------------------|-------------|--------|--|
| Number | Name | Grade | UNS | |
| EN-JL1040 | EN-GJL 250 | Class 40B | / | |
| 1.4460 | X3CrNiMoN27-5-2 | Grade 1A | J93370 | |
| 1.4462 | X2CrNiMoN22-5-3 | S32205 | S32205 | |
| 1.4517 | GX2CrNiMoCuN25-6-3-3 | Grade 1C | J93373 | |
| 1.4517 hardened | GX2CrNiMoCuN25-6-3-3 | Grade 1C | J93373 | |



Close to our customers



ANDRITZ AG

Stattegger Strasse 18 8045 Graz, Austria Phone: +43.316.6902-3020 Fax: +43.316.6902-413

marlene.eder@andritz.com

www.andritz.com/pumps

All data, information, statements, photographs and graphic illustrations made in this leaflet are without any obligation and raise no liabilities to or form part of any sales contracts of ANDRITZ AG or any affiliates for equipment and/or systems referred to herein. © ANDRITZ AG 2009. All rights reserved. No part of this copyrighted work may be reproduced, modified or distributed in any form or by any means, or stored in any database or retrieval system, without the prior written permission of ANDRITZ AG or its affiliates. Any such unauthorized use for any purpose is a violation of the relevant copyright laws. ANDRITZ AG, Stattegger Strasse 18, 8045 Graz, Austria